

ITTEST

QUESTION & ANSWER

Guías de estudio precisos, Alta tasa de paso!



Ittest ofrece información actualizada de forma gratuita en un año!

Exam : 000-R09

Title: IBM SurePOS 300 Model

33x Technical Professional

Version: DEMO

B. Customers C. Integrators D. OEM vendors E. Hardware developers F. Independent Software Vendors (ISVs) Answer:ACF 2. What industry standard expansion capability is found on the SurePOS 300 Models 330 and 33H? A. Peripheral Component Interconnect (PCI) Express slot B. Full-size Peripheral Component Interconnect (PCI)slot C. Peripheral Component Interconnect Extended(PCI-X) slot D. Half-size Peripheral Component Interconnect (PCI) slot Answer: D 3. What is the standard hard drive type used in the SurePOS 300 Model 33H? A. A single 3.5" SCSI Hard Drive B. A single 3.5" IDE Hard Drive C. A single 2.5" (laptop size) IDE Hard Drive D. A single 3.5" Serial ATA (SATA) Hard Drive Answer: D 4. When removing the CD-ROM drive from the system unit, in which order should the removal steps be performed? A. 1. While pulling the tab on the side of the CD-ROM bracket outward, pull the bracket away from the CD-ROM. 2. Open the unit. 3. Disconnect the power and signal cables from the CD-ROM drive. 4. While pressing the blue latch toward the CD-ROM, lift out the

1. Which three groups is PartnerWorld targeted to?

A. Resellers

- B. 1. Open the unit. 2. Disconnect the power and signal cables from the CD-ROM drive. 3. While pressing the blue latch toward the CD-ROM, lift out the CD-ROM with bracket. 4. While pulling the tab on the side of the CD-ROM bracket outward, pull the bracket a
- C. 1. Open the unit. 2. Disconnect the power and signal cables from the CD-ROM drive. 3. While pulling the tab on the side of the CD-ROM bracket outward, pull the bracket away from the CD-ROM. 4. While pressing the blue latch toward the CD-ROM, lift out the
- D. 1. Disconnect the power and signal cables from the CD-ROM drive. 2. Open the unit. 3. While pressing the blue latch toward the CD-ROM, lift out the CD-ROM with bracket. 4. While pulling the tab on the side of the CD-ROM bracket outward, pull the bracket a

Answer: B

- 5. How often should the SurePOS 300 ventilation fan on the rear panel be cleaned/vacuumed?
- A. Once a year
- B. Twice a year
- C. Every 6 months
- D. Every time the unit is serviced

Answer: B

- 6. Which step describes the first recommended action that should be taken to gain access to the system components?
- A. Unplug the power cord
- B. Slide the top cover back, then lift it up
- C. Remove the two screws at the top of the back of the unit
- D. Loosen the thumb screw which holds the power supply in place Answer:A
- 7. A problem with the system can be caused by a software error or a hardware failure. Which of the following best describes the first step in performing the Preliminary Checklist?
- A. Verify that a supported operating system has been installed properly.
- B. Verify that all the I/O devices are connected securely to the system unit.
- C. Insure that the AC power is connected to the system unit and that all the power lights are on.

D. Make sure that all the I/O devices are connected to an operating AC outlet and that all the devices are powered on.

Answer: C

- 8. Which three services does TechLine (formerly called PartnerLine) offer?
- A. Locating Retail Store Solutions marketing and sales information via the Internet
- B. On-site installation and set up assistance
- C. Product positioning information
- D. Financing assistance
- E. Configuration assistance
- F. Placing orders

Answer:ACE

- 9. What USB options are available on the SurePOS 300 Models 330 and 33H?
- A. One PC USB port and three powered USB ports (two 12 volt and one 24 volt)
- B. Two PC USB ports and two powered USB ports (one 12 volt and one 24 volt)
- C. Two PC USB ports and three powered USB ports (two 12 volt and one 24 volt)
- D. Four PC USB ports and two powered USB ports (one 12 volt and one 24 volt)
 Answer: C
- 10. What type and size of video memory does the SurePOS 300 terminal offer?
- A. 64 MB of dedicated Video RAM (VRAM)
- B. 128 MB of dedicated Rambus DRAM (RDRAM)
- C. Up to 128 MB of shared Synchronous Graphic RAM (SGRAM)
- D. Up to 64 MB of shared Unified Memory Archeticture (UMA) RAM $\,$

Answer: D

This document was created with Win2PDF available at http://www.win2pdf.com. The unregistered version of Win2PDF is for evaluation or non-commercial use only. This page will not be added after purchasing Win2PDF.